

Concord 4 Keypad Codes

8 + Installer Code + 00 – Enter Installer Programming

8 + Installer Code + 01 – Scan for bus devices

8 + Installer Code + 02 – Enable programming key pad

8 + Installer Code + 03 – Initiates a dealer sensor test

8 + Master Code + 2 – Phone Test

8 + Master Code + 3 – Sensor Test

8 + Master Code + 6 + Partition (Partition Jumping)

8 + Master Code + 08 – View Event History

9 + Master Code – Enter user menu

MASTER CODE RESET

9 + Installer Code + 3 + #, then select # to select User Codes, scroll to Master Codes and reset.

Default Installer Code = **4321**

Default Master Code= **1234**