

IQ Panel 2—Bypass & Force Bypass Sensors

Bypass Sensors

1. Press the LOCK icon then press » on the right. Select **ALL** to display all sensors.



2. Select the sensor you want to bypass. Then press **ARM STAY** or **ARM AWAY**.



Force Bypass Sensors

Press the LOCK icon. Select **ARM STAY** to arm exterior sensors and automatically bypass open sensors.

