

Replacing the Battery Temperature Sensor QS5515-840 or QS5535-840

Step by Step Instructions:

- Press top tab to remove the cover, then remove and replace 2 CR2032 Lithium batteries.

