

605-339-0575
jfoss@foss-avi.com
fosssecurity.com
623 S Lyons Ave Ste 300
Sioux Falls, SD 57106



Simon XTi & XTi5 Instructions

Disarm the system or Cancel an accidental alarm

1. Press PRESS TO DISARM.
2. Enter your code when the keypad screen appears.
The panel displays and speaks Disarmed and the panel beeps once.

Arm to—STAY * (no motion sensors)

1. Ensure that all doors and windows are closed.
2. Press PRESS TO ARM.
3. Press DOORS & WINDOWS ONLY (STAY).
4. If a code is required, enter your code when the keypad screen appears.
The panel speaks Doors and Windows On and starts an exit delay, and sounds exit beeps in groups of two until the exit delay expires. To cancel arming press CANCEL ARMING on the countdown screen.

Arm to—AWAY * (motion sensors on)

1. Press PRESS TO ARM.
2. Press MOTION SENSORS ONLY (AWAY).
3. If a code is required, enter your code when the keypad screen appears.
The panel speaks Motions On, starts an exit delay, and sounds exit beeps in groups of three until the exit delay expires.
Note: Depending on your configuration, this option may not appear.

No Entry Delay * (no delay on entry doors)-Usually at night when everyone is inside.

1. Close all door and windows.
2. Press PRESS TO ARM.
3. Press the OFF next to Entry Delay.
4. Press your desired arming level. The arming countdown begins.

Silent Arming *

The silent exit feature silences the status beeps that accompany the exit delay. Press ON next to Silent exit before pressing the arming level icon to silence status beeps. The panel will still beep at the beginning and end of the exit delay. The beep volume can be adjusted.

Note: Enabling silent exit doubles the exit delay time.

To Adjust the Beep or Voice Volume

1. Press the gear icon in the lower right of the screen to access the Status and Settings menu.
2. Scroll to the Voice or Beep volume settings.
3. Press the left and right arrows to adjust the volume to the desired level.

Send a Medical Alarm

1. Press Emergency.
2. Press Panic.

Send a Police Alarm

1. Press Emergency.
2. Press Police.

Send a Fire Alarm

1. Press Emergency.
2. Press Fire.

Check the system status. -Usually after an alarm or if the system is beeping randomly.

1. Press the gear icon in the lower right of the screen to access the Status and Settings menu.
2. Press the Listen, next to Panel Status, to have the panel speak the current status of the panel.
Note: If a yellow triangle icon appears a trouble condition has occurred. Press Clear to clear certain panel status messages.

Turn Chime on/off (enables the voice announcement at the panel when a door is opened)

1. Press the gear icon in the lower right of the screen to access the Status and Settings menu and scroll to the Chime option.
2. Press On or Off to modify the setting (a gold icon indicates the option is selected).
3. Press Close to exit the Status & Settings menu.