

Replacing the Battery Door/Window Sensor Interlogix 60-670-95R

CAUTION! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.

WARNING! This product contains a coin battery. If it is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Batteries can be purchased at your local hardware, mass retailer, or battery store.

Press the end button to remove the cover, then remove and replace 2 AAA alkaline batteries.



Replacing the Battery Door/Window Sensor Interlogix 60-362N-10

CAUTION! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.

WARNING! This product contains a coin battery. If it is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Batteries can be purchased at your local hardware, mass retailer, or battery store.

Press end latch to remove the cover, then remove and replace the CR123A lithium battery.




Replacing the Battery Micro Door/Window Sensor Interlogix TX-1012-01

CAUTION! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.

WARNING! This product contains a coin battery. If it is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Batteries can be purchased at your local hardware, mass retailer, or battery store.

Insert a coin or screwdriver into the slot and twist to open, using a screwdriver to then pry open the inside cover. Remove and replace CR2032 battery.

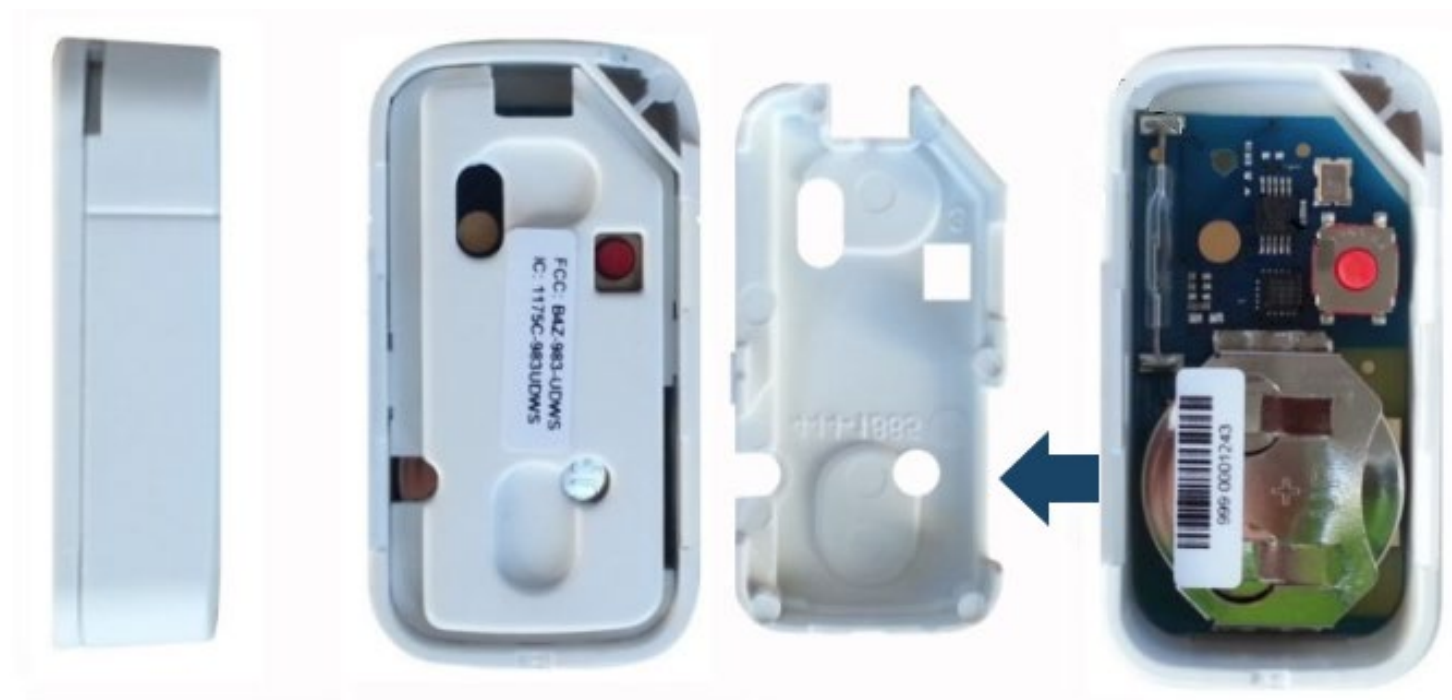

Replacing the Battery Micro Door/Window Sensor Interlogix 60-688-95

CAUTION! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.

WARNING! This product contains a coin battery. If it is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Batteries can be purchased at your local hardware, mass retailer, or battery store.

Use a screwdriver to pry open the backplate, then pry off the cover. Remove and replace CR2032 battery.

