















DSC PowerSeries Neo



Security Panel User Guide













The PowerSeries Neo Alarm System uses shortcut keys to access features on all models of keypads. When using an LCD keypad, the PowerSeries Alarm System uses a menu based navigation system. The scroll keys can be used to navigate through the list of options contained within the current menu. For detailed information about the PowerSeries Neo Alarm System, refer to the full online manual, which can be accessed from our website at fossecurity.com/tech-corner

Note: Some features must be enabled by installer.

Note: Bypass Groups are not permitted in UL listed installations.

STATUS LIGHTS		Function Keys	Emergency Keys
	Ready - Indicates system normal. Must be on to arm system. All zones must be secured or bypassed and the system disarmed for this light to activate.	 Away Arm	 Fire
	Armed - Indicates system is armed . If the Ready light and the Armed light are both on, an Exit Delay is in progress.	 Stay Arm	 Medical
	Trouble - On indicates a system malfunction or tamper. Flashing indicates that the keypad has a low battery condition. Follow the instructions displayed or enter [*][2] to view trouble. Correcting the trouble turns off the indicator.	 Chime	 Panic
	AC Power - Indicates AC Power is present. The AC Power light will turn off when AC is absent.	 Reset Sensors	
		 Quick Exit	

ACTION	PRESS
Away Arm	 for 2 seconds + [Access Code*]
Stay Arm	 for 2 seconds + [Access Code*]
Night Arm	When armed in stay mode [*][1] + [Access Code*]
Disarm	[Access Code]
No-Entry Arming	[*][9] + [Access Code*]
Quick Arm/ Quick Exit	[*][0]
Abort Arming Sequence	[Access Code]

ACTION PRESS	
Bypassing - All bypass commands begin with [*][1] + [Access Code*]	
Bypass Individual Zones	[3 Digit Zone #]
Bypass All Open Zones	[9][9][8]
Recall Last Bypass	[9][9][9]
Clear Bypass	[0][0][0] OR [Scroll] Bypass Options + [*] + [Scroll] Clear Bypasses + [*]
Program Bypass Group	[3 digit zone #s] + [9][9][5] OR [3 digit zone #s] + [Scroll] Bypass Options + [*] + [Scroll] Prg Bypass Group + [*]
Load Bypass Group	[9][9][1] OR [Scroll] Bypass Options + [*] + [Scroll] Bypass Group + [*]
Common Functions	
Set Time and Date	[*][6] [Master Code] + [0][1]
Turn Chime ON/OFF	[*][4] + [Access Code*] OR 
Change Brightness	[*][6] [Master Code] + [1][2] +  
Change Contrast	[*][6] [Master Code] + [1][3] +  
Add/Delete User	[*][5] + [Master Code] + [Access Code] + 1
Reset Smoke Detectors	 OR [*][7][2]
View Troubles	[*][2] + [Access Code*] +  
View Alarms	[*][3] + [Access Code*] +  
Perform System Test	[*][6] + [Master Code] + [0][4] +  
Buzzer Volume	[*][6] + [Master Code] + [1][4] + 