

Replacing the Battery Recessed Door/Window Contact PG9307

CAUTION! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.

WARNING! This product contains a coin battery. If it is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The PG9307 uses a replaceable lithium battery and should last up to 10 years under normal usage. Requires 1 CR2 Lithium Battery.

Step by Step Instructions:

1. Insert a small, flat-head screwdriver into the slots on the side of the contact housing and release the contact cover.
2. Pull out the cover from the door/window contact housing.
3. Observe the polarity and insert or replace the battery.
4. Reinsert the contact cover (with circuit board attached).

Legend

A. Door/window contact housing

B. Breakable screw ears

C. Contact cover
and circuit
board

D. Magnet
cover

E. Magnet with
double-sided
tape

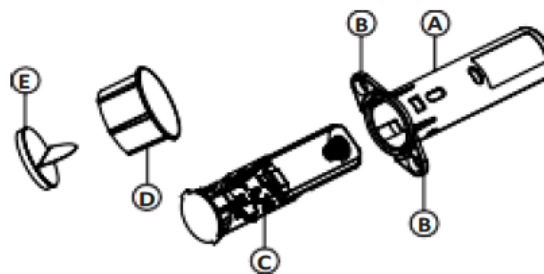


Figure 1. Recessed door/window contact